# Battery for Irobot, 7150, Roomba 5150, Roomba 7550 14.4V, 3400mAh - 48.96Wh

## **Product price:**

C\$99.99

**Product features:** 

**Product Information** Capacity.: 3400mAh

Dimensions (mm): 74.20 x 51.00 x 50.20mm

Fits Models:- 7150, I31502f, I8550, Chemistry.: Li-ion Roomba 5150, Roomba 7550, Roomba Length (inches).: 5.48 E5, Roomba E5150, Roomba E515020, Width (inches).: 2.02 E5152. Roomba E5154, Height (inches).: 1.99 Roomba

Roomba E6 E6134, Height (mm).: 50.5

Roomba E6198, Roomba E619820, Width (mm).: 51.38 Roomba I3, Roomba I4, Roomba I7, Voltage.: 14.4V

Roomba 17+, Roomba 17158, Roomba Gross Weight:: 0.337 Kg

Roomba Colour.: Black 1755020. 17550, Roomba

18+, Ean Code: 4894128153375 Net Weight.: 0.237 Kg

Model Our Part Number: CS-IRB710VX Special Remarks: Regarding "Error 23"

Special Remarks: When the APP is connected to **Specifications** 

Roomba i7, "error 23" should not appear when the

battery is removed.

Special Remarks: When the APP is closed or

disconnected from Roomba i7, "error 23" will appear when removing the battery and then installing the (CS or

original) battery.

Special Remarks: To avoid the problem of the APP, x customers are advised to ensure the APP is well

50.20mm connected to the machine.

Special Remarks: If "error 23" appears after installing

the battery, please close the APP

Special Remarks: then remove the battery from the

machine

We update this list as new information Special Remarks: after that, press the start button of the becomes available. See the product machine for 10 seconds. And then, reinstall the battery and put it on the charger. Wait for the machine to start automatically. Finally, open the mobile APP to connect

**Product short description:** 

Fits Brands:- Irobot

Roomba E5158, Roomba E515840, Length (mm).: 139.16

Roomba E6,

17558. Roomba 18, Roomba

Roomba J7

Fits **Battery** 

Numbers:- 4624864, Abl-d1, Abl-d2

Item No.: CS-IRB710VX

Type: Li-ion

Capacity: 3400mAh / 48.96Wh

Voltage: 14.4V

Colour: Black

• Dimension: 74.20 x 51.00

EAN Code: 4894128153375

Net Weight: 237.0g

Gross Weight: 337.0g

description for more details.

Remarks concerning this product:-

Regarding "Error 23" When the APP is the machine. connected to Roomba i7, "error 23" Watt Hour.: 48.96Wh disconnected from Roomba i7, "error 14.4v, 3400mah - 48.96wh battery and then installing the (CS or replacement warranty on this product. original) battery. To avoid the problem of the APP, customers are advised to ensure the APP is well connected to the machine. If "error 23" appears after installing the battery, please close the APP; then remove the battery from the machine; after that, press the start button of the machine for 10 seconds. And then, reinstall the battery and put it on the charger. Wait for the machine to start automatically. Finally, open the mobile APP to connect the machine. Latest Update:- 12th December 2022

should not appear when the battery is Description: Canadian Batteries supplies high quality, removed. When the APP is closed or Batteries For Irobot, 7150, Roomba 5150, Roomba 7550

23" will appear when removing the Warranty Period: 30 Days to return for refund & 1 Year

### Product codes:

Reference: CS-IRB710VX EAN13: 4894128153375

UPC: -

#### **Product attributes:**

### **Product gallery:**

